




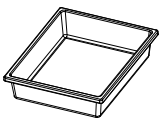





PART LIST

A:Side Panel	B:Top/Bottom Tray	C:Metal Bar with Screws
2 PCS	2 PCS	2 SETS
		
D: Wheel	E:Handle	F:Removable Tray
4PCS	2 PCS	5 PCS
		
G:Dryer Holder	H:Tool	
1 PC	1 PC	
		

TASALON
PROFESSIONAL


Instruction Manual

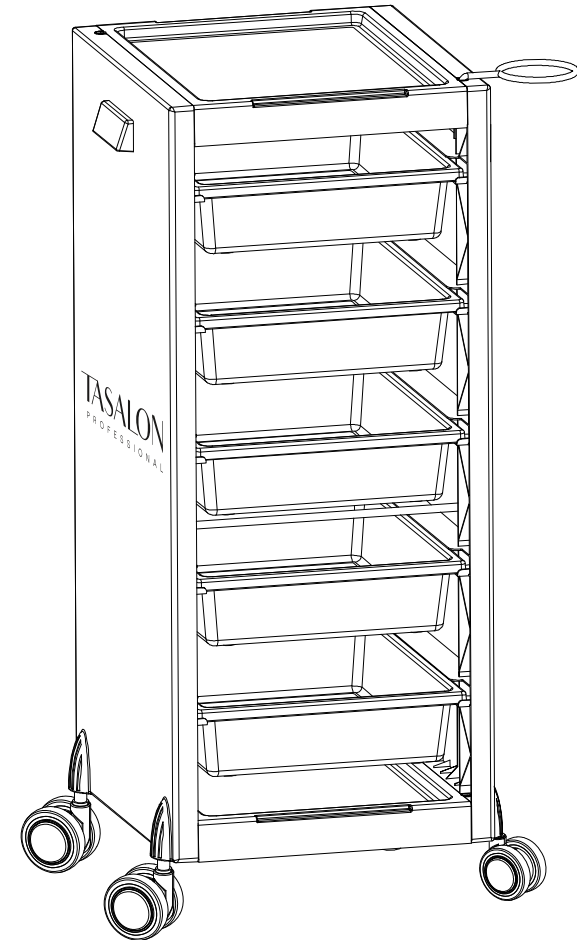

HAIR SALON TROLLEY
Designed by and for Professionals


1
year
limited
warranty

Installation

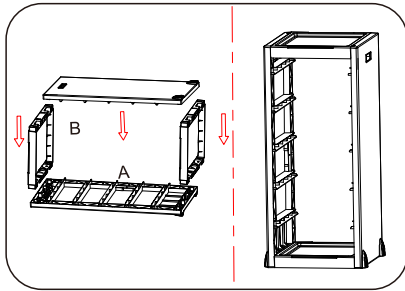


Step 1

Connect the 2 side panels (A) with Top and Bottom Trays (B). Make sure all connections are fully snapped.

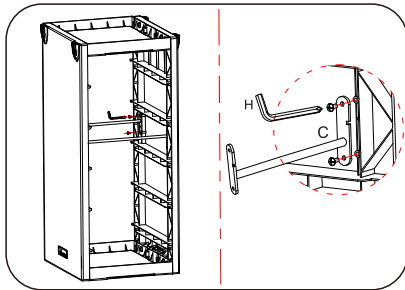


Step 2

Connect both Side Panels (A) with the 2 Metal Bars (C). Use the Tool (H) to fasten the screws.

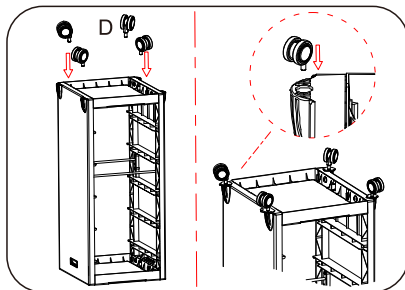


Step 3

Plug the 4 Wheels (D) into the holes in the bottom of Side Panels (A).

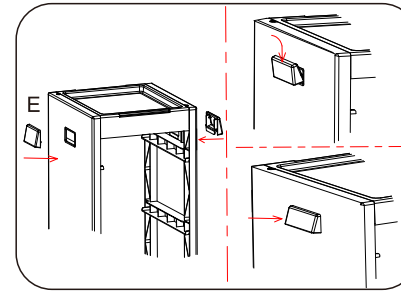


Step 4

Attach the 2 Handles (E) to the Side Panels (A). Follow the steps on the drawings.

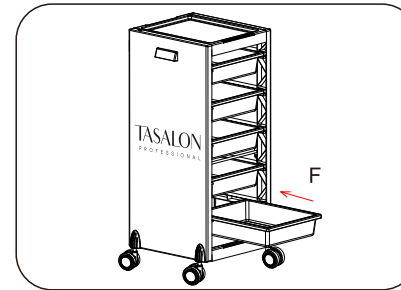

Step 5

Place the 5 Removable Trays (F) to the rails inside the cabinet.

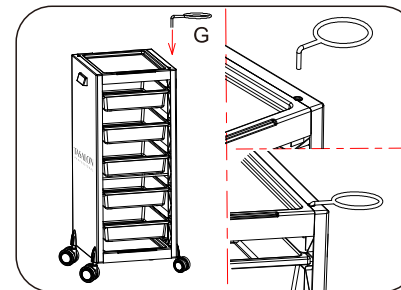

Step 6

Plug the Dryer Holder (G) into the hole in the top.